




Accessories - Connectors/Cables

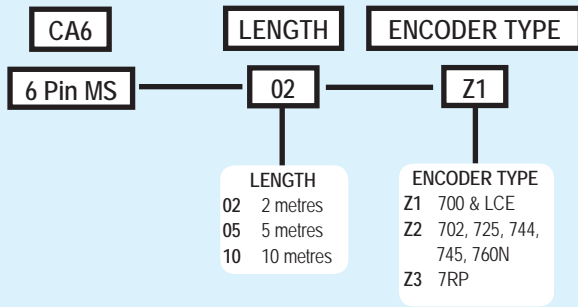


For Pin Detail & Wiring Colours please refer To the Correct Encoder Type Data Sheet

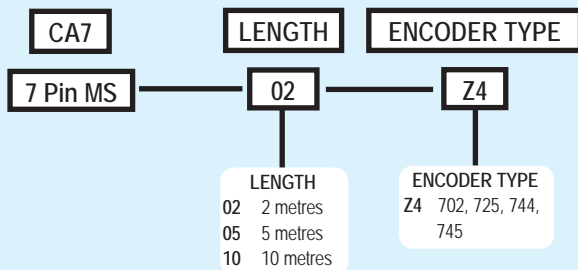


For Pin Detail & Wiring Colours please refer To the Correct Encoder Type Data Sheet

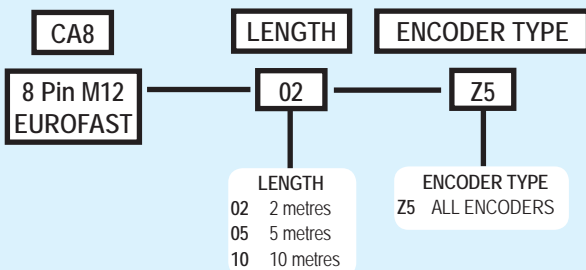

For Pin Detail & Wiring Colours please refer To the Correct Encoder Type Data Sheet

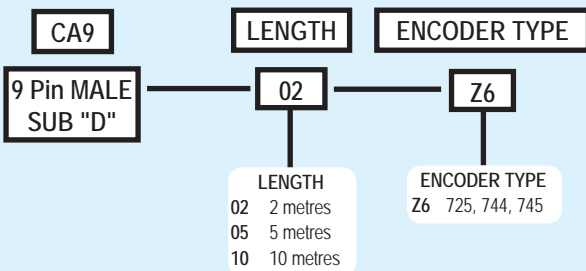


For Pin Detail & Wiring Colours please refer To the Correct Encoder Type Data Sheet

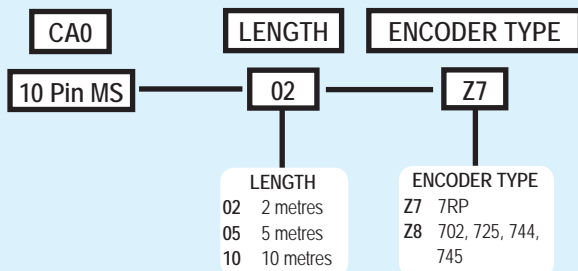


For Pin Detail & Wiring Colours please refer To the Correct Encoder Type Data Sheet


4 pin (C04) Hirschmann Connector & Front Face Pin-Out Information

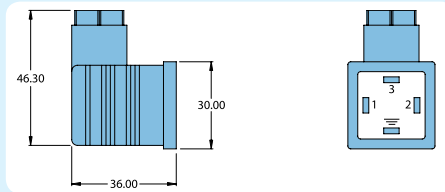


6 Pin & 7 Pin (C06 & C07) MS Connector & Front Face Pin-Out Information

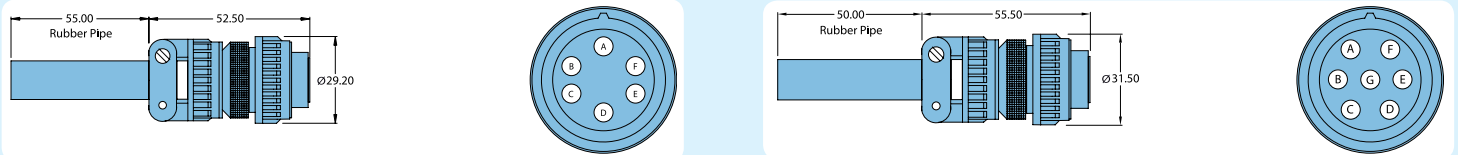


8 Pin (C08) M12 Eurofast Connector & 9 Pin "D" (C09) Connector (Female) & Front Face Pin-Out Information

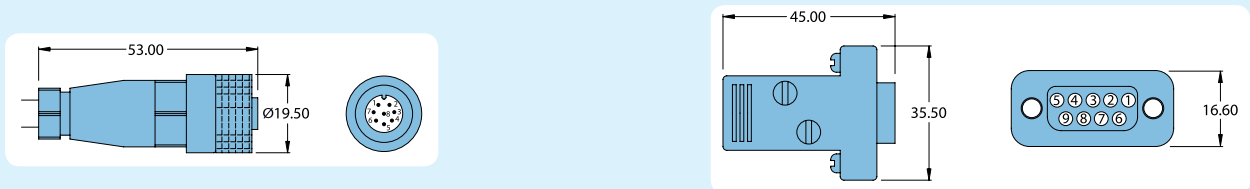


10 Pin (C10) MS Connector & Front Face Pin-Out Information

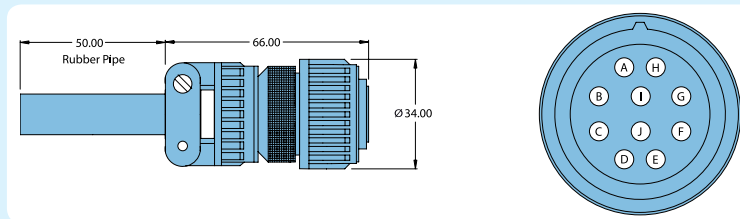

12 Pin (C12) and 16 pin (C16) MS Connector & Front Face Pin-Out Information

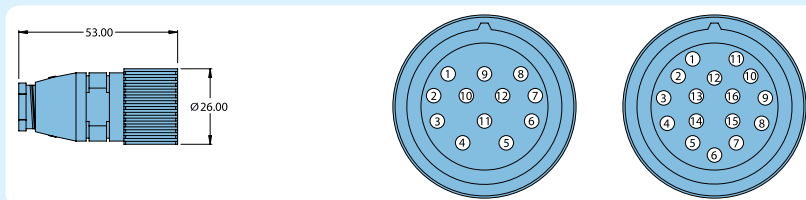

17 pin (C17) MS Connector & Front Face Pin-Out Information

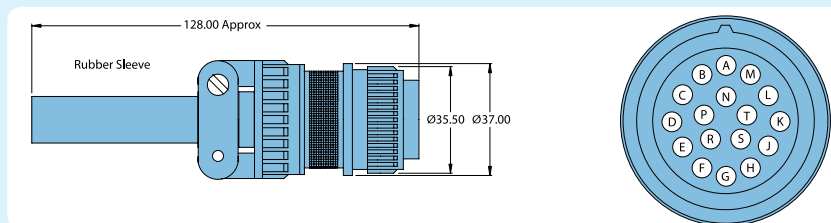

19 pin (C19) MS Connector & Front Face Pin-Out Information

